


CORnell®

User Manual

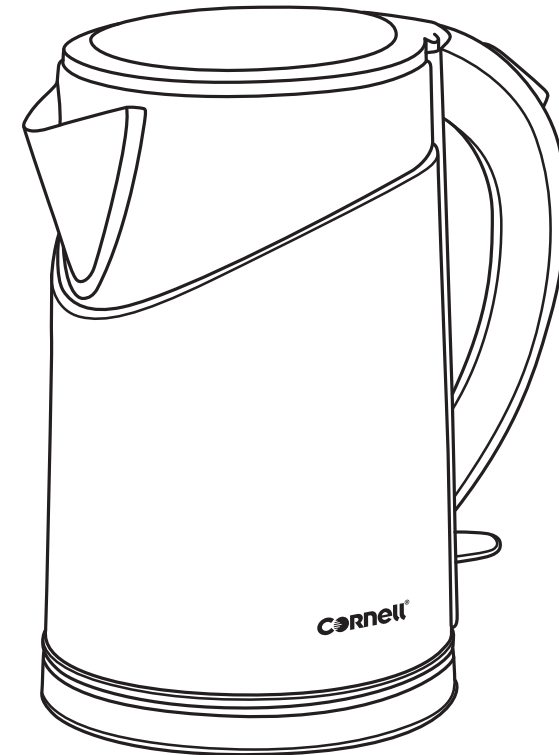

CORnell®

Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com



Electric Jug Kettle

CJK-P181SSB
CJK-P181SSR

CONTENTS

3 PARTS IDENTIFICATION

3 SPECIFICATIONS


4 IMPORTANT SAFEGUARDS

5 OPERATING INSTRUCTIONS

6 CARE & CLEANING

PARTS IDENTIFICATION

1. Body
2. Handle
3. ON/OFF Switch
4. Lid Button
5. Spout

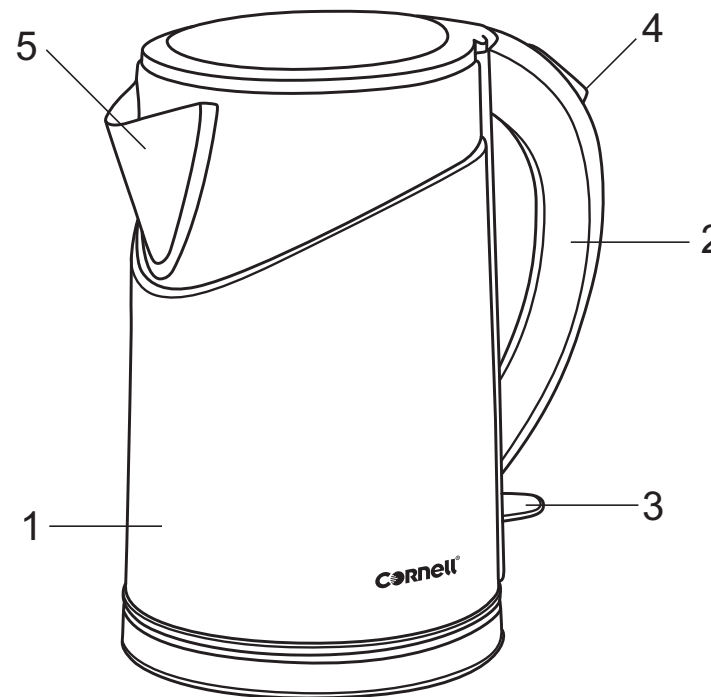

SPECIFICATIONS

MODEL NO.	CJK-P181SSB / CJK-P181SSR
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	1500W
CAPACITY	1.8L

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS CAREFULLY

1. Do not touch hot surfaces. Use handles or knobs.
2. To prevent fire, electric shock and injuries, DO NOT IMMERSER POWER CORD, POWER PLUGS, POWER BASE OR KETTLE IN WATER OR OTHER LIQUIDS.
3. Close supervision is necessary when any appliance is used by or near children. Always keep the kettle and its power cord out of children's reach. Warn other users, especially children, of the possible dangers, such as escaping steam, hot water, hot lid and so forth.
4. Unplug from power outlet when not in use and before cleaning.
5. Allow the appliance to cool down before assembling or disassembling parts, and before cleaning.
6. Do not operate the appliance with a damaged power cord or power plug. If a malfunction occurs, return it to the nearest authorized service center for examination, repair or adjustment.
7. Do not allow power cord to hang over edges of table or counter, or come into contact with hot surfaces.
8. Do not place this appliance on or near a hot gas or electric burner, or inside a heated oven.
9. Always fill the kettle with water first, then place the appliance onto the power base before connecting the power plug into the power outlet. To disconnect, remove kettle body from power base before removing the power plug from the power outlet.
10. Always remain vigilant when the appliance is on, and in particular be careful of hot steam coming out of the spout.
11. Never touch or move the kettle when it is in operation.
12. Before pouring, wait until the kettle has stopped boiling and then pour steadily. If the kettle is tipped too much, the lid may fall off or open.
13. **WARNING:** Scalding may occur if the lid is removed during the boiling cycle.

OPERATING INSTRUCTIONS

FILLING WATER

1. Fill the maximum level as marked on the body of the kettle.
2. Never fill the kettle when the appliance is still connected to its power base.
3. Do not fill it above the maximum level, or below the minimum level. If the kettle is too full, boiling water may spill out.
4. Do not use without water.
5. Ensure that the lid is properly closed before use.

WARNING: DO NOT OVER FILL – HOT WATER MAY SPILL OUT !

BOILING WATER

1. FILLING WATER

Gently lift off the lid & fill the kettle with water. The maximum amount of water to be used is indicated by the 1.8L level.

2. CLOSE THE LID

Ensure that the kettle's spout is facing away from you and then close the lid.

3. PLACE KETTLE ON THE POWER BASE

Place the kettle on the power base so the element on the bottom of the kettle sits securely on the power base.

4. POWER "ON"

Press the power "ON" switch gently pushing down until a "click" sound is heard. When the water reaches boiling point, the kettle & indicator light will be switched "OFF" automatically.

Ensure that the on/off button is in the "OFF" position after boiling and before removing it from the power base.

NOTE: The kettle can be switched off at any time before the water boils simply by lifting the kettle off the base.

5. POUR AND SERVE:

Pour water out slowly and return kettle to base after pouring.

CARE & CLEANING

1. Unplug kettle from power outlet and detach it from the power base.
2. Allow it to cool down.
3. Clean it with a damp sponge.
4. Never immerse the kettle, its power base, power cord or the power plug in water or any other liquids. The electrical connections or the switch must not come into contact with water.
5. Do not use scouring pads.
6. To descale the kettle's interior, add 5ml of white vinegar with water & boil for 5-10 minutes.
7. Switch off. Remove plug. Empty the kettle then rinse at least three more times to remove any remaining residues.

CAUTION

1. Always disconnect from the power outlet before boiling or emptying the kettle and always ensure that the "ON/OFF" switch is always in "OFF" position when not in use.
2. Never immerse the kettle or power base in water or allow water to come into contact with the terminal pins.
3. Do not allow power base cord overhang bench or table or touch hot surfaces.