 


CORnell®

User Manual

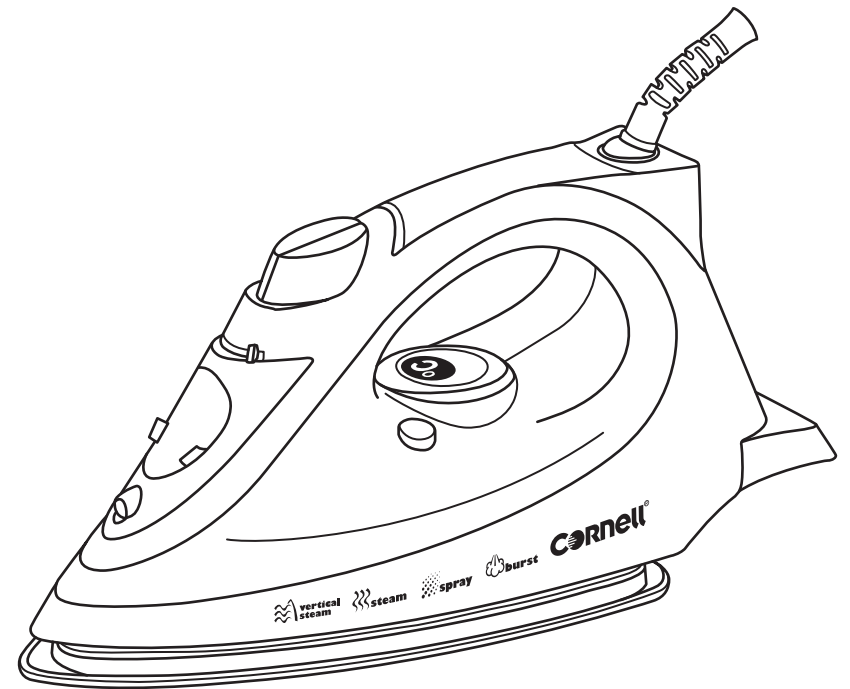

CORnell®

Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com




Steam Iron

CSI-E240CPU
CSI-E240CRD

CONTENTS

3	PARTS IDENTIFICATION
3	SPECIFICATIONS
4	IMPORTANT SAFEGUARDS
4	BEFORE USING FOR THE FIRST TIME
5-7	OPERATING INSTRUCTION
7	ENVIRONMENTAL PROTECTION

 PARTS IDENTIFICATION

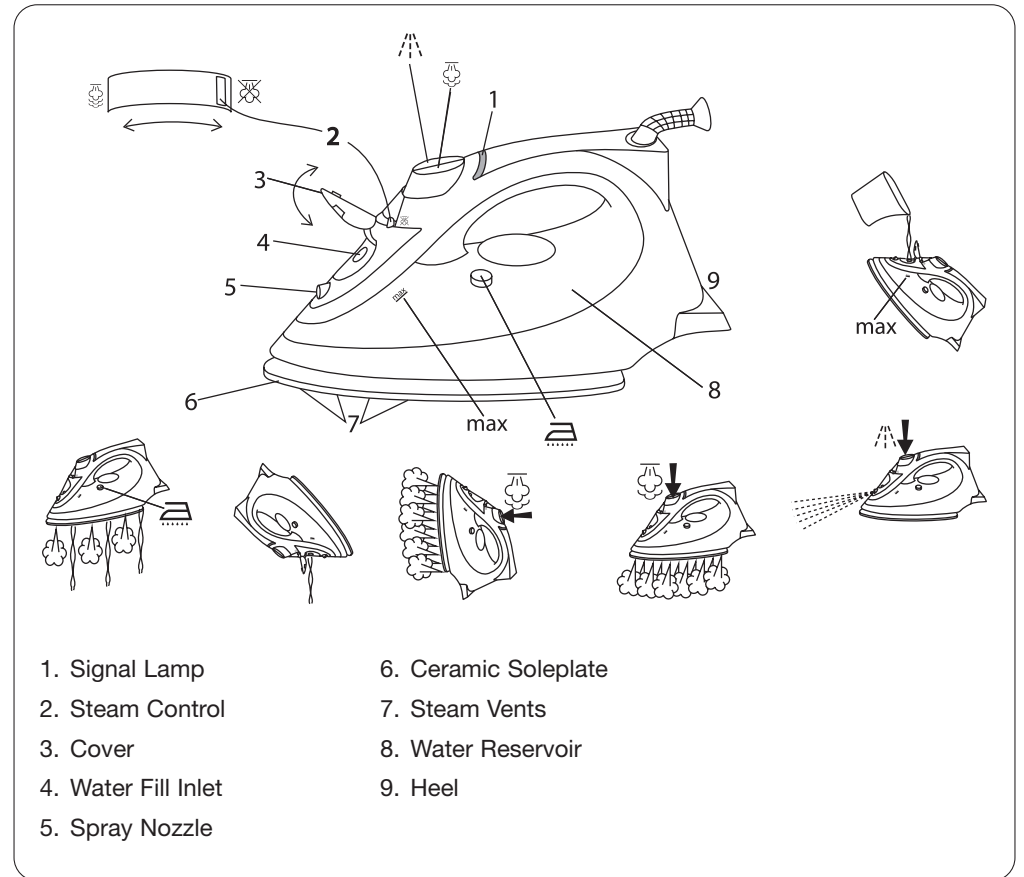

SPECIFICATIONS

MODEL NO.	CSI-E240CPU / CSI-E240CRD
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	2200W


FOLLOW BASIC SAFETY PRECAUTIONS:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
4. Keep the appliance and cable out of reach of children under 8.
5. Use the iron, or set it on its heel, on a stable, level, heat-resistant surface, preferably an ironing board.
6. Don't leave the iron unattended while plugged in, or while it's standing on the ironing board.
7. Unplug the iron before filling, before cleaning, and after use.
8. Do not operate the appliance if it's dropped or damaged, or if it malfunctions or leaks.
9. If the cable is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid hazards.
10. Do not touch the surfaces of the appliance as they will get hot.
11. Do not immerse the appliance in water or any other liquids
12. Do not use the appliance in a bathroom, near water, or outdoors.
13. Do not iron clothing while it's being worn to avoid bodily and personal injuries
14. Do not use the appliance for any purpose other than those described in these instructions.
15. Do not scratch the soleplate. Avoid ironing over buttons, zips and etc.
16. The appliance has a protective thermal fuse, which will blow if it overheats. If this happens, the appliance will stop working, and must be returned for inspection and repairs.

 
AUTO SHUT-OFF

- The iron will automatically switch off after about 30 seconds if there's no motion with the soleplate down, or about 8 minutes if placed upright.
- The appliance will sound an alert reminder.
- The light will blink, and keep on blinking till you move the iron.
- To switch on again, lift it up, tilt it forward, then sit it upright to return to operating temperature.



FILLING

- Tap water may be used for the iron but if you live in a hard-water area, you should use distilled water (not chemically descaled water).
- If you buy distilled water, ensure that it is marketed as suitable for irons.
- Do not add anything to the water when using with the iron to prevent damaging the iron.
- Unplug the appliance.
- Set the steam control to ().
- Open the cover.
- Tilt the iron till the cover is vertical.
- Pour water from the jug into the water inlet.
- Pour slowly, to allow the air in the reservoir to escape, and avoid an airlock.
- Don't fill past the MAX mark on the reservoir, or water will spill during operation.
- Close the cover. Wipe any spillage.



SWITCHING ON

- Set the steam control to ().
- Sit the iron on its heel.
- Insert the power plug into the power supply.
- When the iron reaches the set temperature, the light will go off. It will then cycle on and off as the thermostat operates to maintain the temperature.

 

STEAM IRONING

- Set the steam control to the setting you want [() = no steam, () = high].
- Wait till the light goes off, then start ironing.

SHOT OF STEAM



- Lift the iron off the fabric.
- Press the () button.
- You may have to press the () 2 or 3 times to pump water through the system.
- Leave 4 seconds between shots so as to allow the steam to build up.

BEFORE USING FOR THE FIRST TIME


- Remove any labels, stickers or packaging from the iron and soleplate.
- Smoke may escape from the iron during first use. This is normal and not a malfunction as this will stop as the element cures.
- Iron an old piece of cotton fabric to clean the soleplate.
- Press the () and () buttons 3 or 4 times to ensure the steam and water spray functions are functioning properly.

OPERATING INSTRUCTION




SPRAYING

- Spraying water may result in spotting on some fabrics. Test this on an obscure part of the fabric.
- Lift the iron off the fabric.
- Aim the spray nozzle at the fabric.
- Press the () button.
- You may have to press the () button 2 or 3 times to pump water through the system.


DRY IRONING

- For dry ironing over 20 minutes or more, empty the reservoir first, to avoid spontaneous bursts of steam during operation.
- Set the steam control to ().
- Wait till the light goes off before ironing.

VERTICAL STEAM IRONING




- This function removes wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.
- Ensure there is adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.
- Ensure that there is nothing behind the fabric that may be damaged by the steam.
- Check that pockets, turn-ups, and cuffs are empty.
- Set the steam control to ().
- Lift the iron off the fabric.
- Press the () button.
- You may have to press the () button 2 or 3 times to pump water through the system.
- Leave 4 seconds between shots so as to allow the steam to build up.

AFTER USE

- Set the steam control to ().
- Unplug the appliance from the power supply.
- Open the cover, hold it over a sink, turn it upside down and drain the water from the reservoir via the water inlet and close the cover.
- Sit the iron on its heel.
- Leave it to cool down completely.
- When the appliance has cooled down completely, wipe off any moisture, and wind the cable around the heel.
- Clean the exterior surfaces of the appliance with a damp cloth.
- Remove spots from the soleplate with a little vinegar.
- Store the iron on its heel to avoid corrosion and damage to the soleplate.

OPERATING INSTRUCTION

SELF CLEAN

- To prevent scales from building up, use the self-clean function at least once a month if you leave in normal water areas, and more frequently if living in hard water areas.
- Products returned under warranty with faults due to scaling will be subject to a repair charge.
- Use a basin or a large bowl to keep the water coming out of the soleplate.
- Fill the reservoir to the MAX mark.
- Set the steam control to ().
- Sit the iron on its heel.
- Insert the power plug into the power supply.
- Wait till the signal lamp goes off.
- Hold the iron over the basin or bowl, with the soleplate down.
- Press and hold the () button continuously.
- Gently move the iron to and fro.
- Water and steam will wash scales and dust through the soleplate.
- Continue this action until water inside the reservoir is emptied.
- Release the () button.
- Unplug the appliance from the power supply.

DESCALING

- A descaling agent is incorporated into the iron which helps prevent the build-up of scale.
- Do not use a descaling solution to avoid destroying the anti-scale agent.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused, or recycled.