 


CORnell®

User Manual

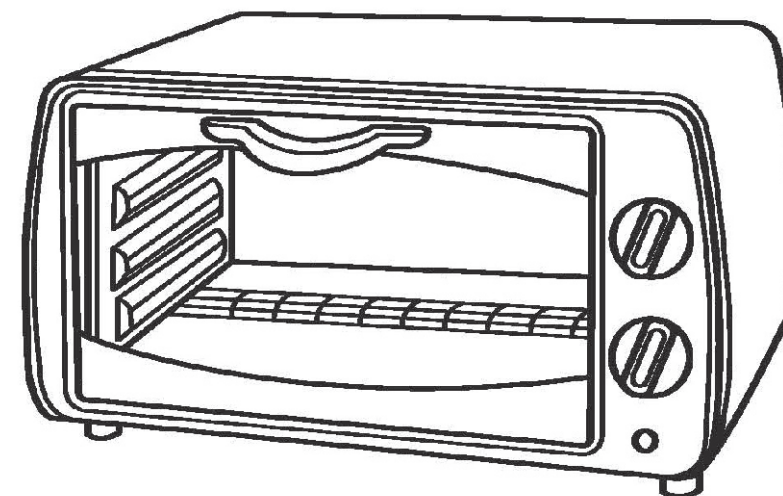

CORnell®

Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com



**Toaster
Oven**

CTO-12HP

C O N T E N T S

3 PARTS IDENTIFICATION

3 OPERATING INSTRUCTION

4 PRECAUTIONS

5 SPECIFICATIONS

6 FIRST TIME OPERATION

6 WARNING

 
 
 
 
 
WARNING

SPECIAL WARNING:





Recycling symbol, don't dispose the product with household refuse.

PRECAUTIONS

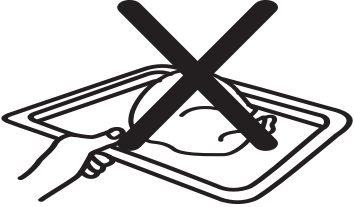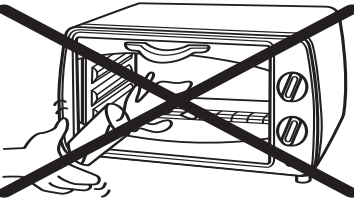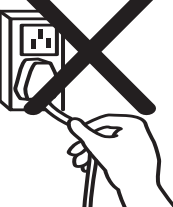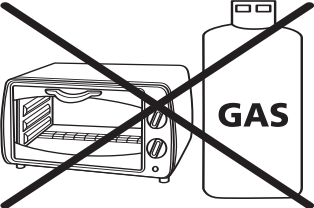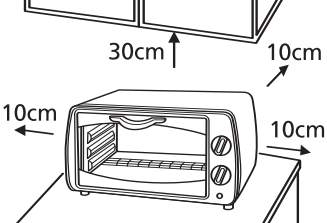	Use the tray handler for inserting or removing of the tray. Attempts on bare hands would cause injuries.
	Do not apply water onto the glass panel, doing so might cause the glass to break
	To unplug, take hold of the socket and not on the cable. Pulling the cable might cause the cable to break.
	Do not position the unit close to source of high temperature or electrical fan during the usage of the unit. Doing so could affect the correct temperature control
	Do not handle the power cord with wet hands and always unplug when it is not in use. Failure to do so could cause fire.
	Is advised not to place the oven too near to a wall or flammable items.

PRECAUTIONS

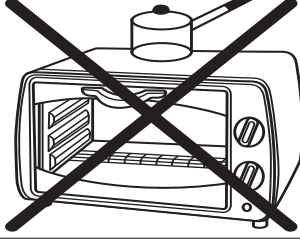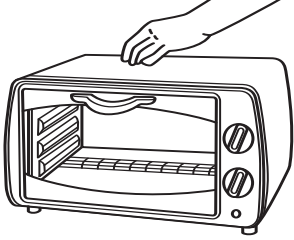	Do not place anything on the oven while using as the heat could cause deformation, cracking, etc.
	Do not touch the metal parts and glass panel of the oven as it will become extremely hot during usage and any carelessness will cause burn to user
	AC power must be taken from a properly wired outlet. Insert the plug completely into the socket, and do not connect multiple plugs to the same outlet.
WARNING: Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by the Customer Service Centre or by an authorized service centre. This product must not be left unattended while it is connected to the supply mains.	

SPECIFICATIONS

MODEL NO.	CTO-12HP
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	800 W
CAPACITY	9 L

FIRST TIME OPERATION


BEFORE USING THE UNIT FOR THE FIRST TIME:

1. Insert the tray and baking net.
2. Pre-Heat the empty oven for about 10 minutes.


Note: There may be some smoke and burning smell at first, but this is not malfunction.

3. Set the arrow on the timer knob to the number which indicates the cooking time (minutes) according to the dishes you are going to cook. The timer will turn "OFF" automatically at the end of the selected time.
4. The oven can be turned off manually during cooking by turning the Timer counter-clockwise to the "OFF" position.

Note: Cooking time maybe longer if the interior of the oven is dirty

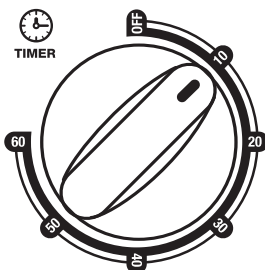

PARTS IDENTIFICATION

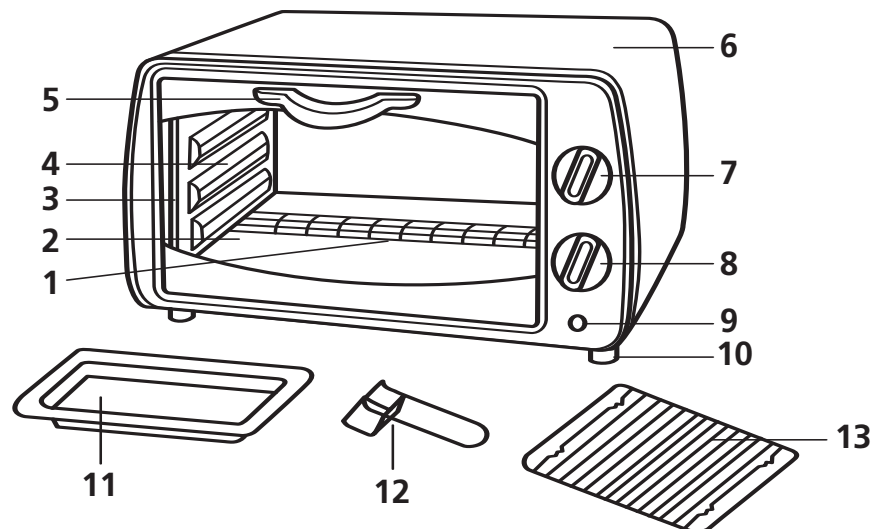


1. Heating element
2. Glass Door
3. Inner case
4. Rack support
5. Door handle


6. Outer case
7. Temperature knob
8. Timer knob
9. Indicator light
10. Stand

11. Baking tray
12. Tray handler
13. Wire rack

CLEANING AND CARE

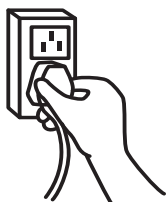

Unplug and allow for cooling before cleaning

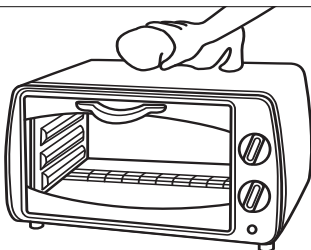

When cleaning, wash the interior and exterior surface, tray, grid, and tray handler with soft cotton (or sponge) with neutral cleaner. Then wash with clean water. Do not use hard brush or any others to wash, so as not to scrape the interior surface of the oven, and to protect the tray, the net and the tray handler.




Do not use abrasive cleaners such as gasoline, thinner, polishing powder or solvent for cleaning

OPERATING INSTRUCTION

Please read carefully on the following instructions before attempting on using the appliance

Special indication: the parts and accessory varies from different models. Please refer to the actual model you buy.

BAKING TRAY

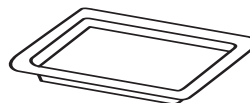


Roast Chicken, Gratin, Hamburg steak, Sponge cake, almost all other oven-cooked foods

HOW TO USE TRAY HANDLER



WIRE RACK

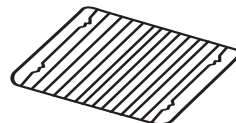

Baked potatoes, Dry food



*Please take note that the trays are not perfectly square.