


CORNELL®

User Manual

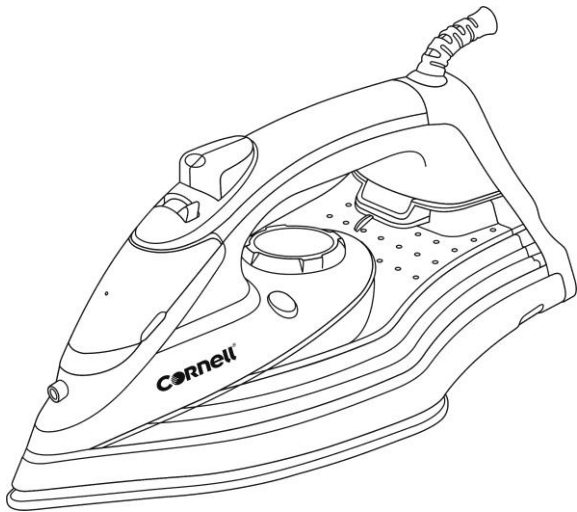

Steam Iron


CSI-E220SRD

SAFETY REGULATION

- 1) Always switch off and unplug the power socket from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
- 2) **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUIDS.** Please refer to the section on “Care and Cleaning”.
- 3) If it is a detachable power cord, always connect the power cord to the appliance first **BEFORE** plugging it into the electrical outlet. To disconnect the appliance, switch off the power on the electrical outlet before removing the power plug.
- 4) Do not operate the appliance with a damaged cord set or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
- 5) Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable materials.
- 6) Do not use in the outdoors or while standing in a damp area.
- 7) Do not left unattended while it is connect to the supply.
- 8) Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch the hot surface. Extreme caution must be used when moving an appliance containing hot liquids.
- 9) Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.

10) This appliance is not intended for use by people who are physically and mentally impaired (including children), or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PARTS IDENTIFICATION

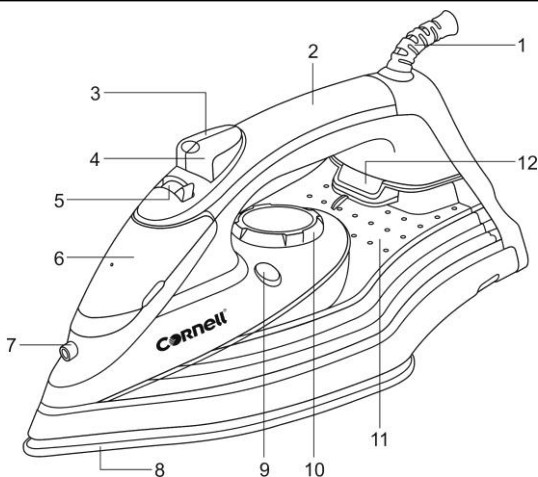

- | | |
|------------------|------------------------------|
| 1. Cord | 7. Spray Nozzle |
| 2. Handle | 8. Stainless Steel Soleplate |
| 3. Spray Button | 9. Self Clean Button |
| 4. Burst Button | 10. Temperature Control Knob |
| 5. Steam Control | 11. Water Tank |
| 6. Water Inlet | 12. Pilot Light |

SPECIFICATION


Model	CSI-E220SRD
Voltage	220-240V~
Frequency	50/60Hz
Power	2200W

OPERATING INSTRUCTIONS

Note: For the first use, it is normal to see a little water retention in the water tank due to production test.

1. Remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
2. Textile which has been applied (gloss, crinkle, relief etc.) is best ironed at lower temperatures.
3. Sort the garment according to ironing temperature. The iron heats up quicker than it cools down. Therefore, start ironing garment that need to be ironed at lowest temperature, such as those made of synthetic.
4. Temperature guide - Follow the ironing instructions on the garment label. If there are no instructions for the type of fabric used, please consult the table.

Warning: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabrics.



<i>Fabric</i>	Temperature control	<i>Ironing methods</i>
Synthetic, Fibres, Nylon	.	Iron the reversed side first. Do not use the spray function as spraying could cause stains.
Silk, Wool	..	Iron on the reversed side to prevent shiny spots.
Cotton, Linen	...	Set the steam control to “  ” position.

Filling iron with water


1. Set the steam control to “OFF” (no steam) position.
2. Hold the handle to set iron to a leveled position and fill in water through the water inlet.
3. Fill the water tank with filling cup. **Note: Never fill the water exceeding the “MAX” level.**
4. Wipe clean any water outside of the water tank. When finish ironing, please empty the water tank.
5. Normal tap water can be used. However, it is advisable to use distilled water.

Steam ironing

1. Fill in water according to the filling method above.
2. Insert the power plug into the electrical outlet (ensure correct voltage).
3. Set the temperature control at the required position, but steam ironing is only possible at higher ironing temperatures and “Max” setting. Water may leak from the soleplate if temperature is too low.

4. Correct ironing temperature is achieved when the pilot light turns off.
5. The pilot light will turn on from time to time during ironing.
6. Set the steam control to “” position, then start ironing after releasing steam for several seconds.
7. For self clean function, set the steam control to “” position.


Dry Ironing

1. Place the iron vertically and set the temperature control dial at “MIN”.
2. Set the steam control selector to position “”.
3. Set the temperature control dial according to your fabric.
4. You may start iron when the indicator light turns off.

Spraying


1. You can dampen laundry at any temperature by pressing the spray button a couple of times.
2. Fill water tank with water.
3. Press the spray button several times when ironing, especially on heavily creased article.

Burst Steam

1. Fill water tank with water.
2. Set the Steam control selector to the “” position.
3. Press the burst steam button to enhance the distribution of steam into every part of the article to be ironed.
4. Burst steam can only be used at temperature settings between “•••” and “MAX”.
5. Press and release the burst steam button when you hold the iron in vertical position for removing creases from hanging clothes, curtains, etc.

TROUBLESHOOTING GUIDE

Problem	Possible causes	Solution
<i>Soleplate does not heat up</i>	Connection problem.	Check the plug and mains.
	The temperature dial is in "Min" position.	Set the temperature dial to the correct temperature for your fabric.
Temperature is high or low	The temperature control dial is not in the correct position.	Set the temperature control dial to the correct position.
Water is spilled	Steam control is not closed.	Change the steam control to "O" position.
No steam	Temperature control dial is not in the correct position.	Set the temperature control dial to the correct position.
	The steam control is not in the "👤" position.	Set the steam control to "👤" position.
	There is no water in water tank.	Fill in water.
Water drips from the soleplate	The temperature control dial is not in the correct position.	Set the temperature control dial to correct position.

	The iron is not hot enough.	Wait until the pilot light goes off before ironing.
	Water is over the “Max” position.	Discard some water.
Too little steam	Inadequate water.	Fill in water to the correct level.
	Blockage in the water tank or soleplate holes.	Clean (set the temperature dial to max temperature, set steam control to “  ” position.)
Spraying function does not work	Air in the water pump.	Stop up the spray nozzle, then press spray button several times.
	No water or insufficient water.	Fill in water.

If the problem cannot be solved after referring to the above guides, please contact the nearest service center or their representatives.

CARE AND CLEANING

1. CAUTION: Ironing over zippers/rivets on jeans etc. may cause scratches on the soleplate.
2. Turn the temperature knob to “min” and unplug the power. Place the iron upright and let the iron cool completely before cleaning and storing.
3. Wipe the soleplate with a damp cloth and use a non-abrasive cleaner.
4. If the power cord is damaged, it must be replaced by a qualified service agent to avoid hazards.



Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com