 


CORNELL®

User Manual

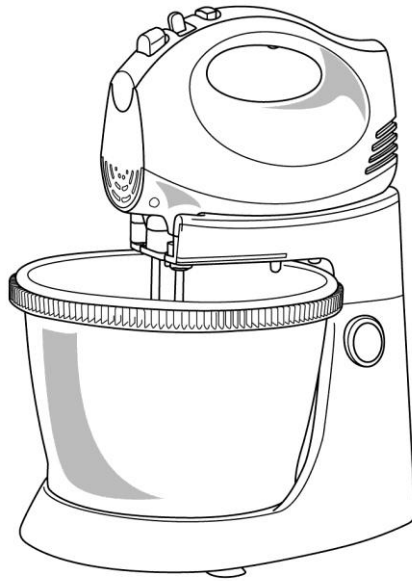

 
**Stand
Mixer**

CSM-8007HP

GENERAL SAFETY PRECAUTIONS

1. Read the Instruction Manual carefully before using for the first time.
2. Always switch off and unplug the appliance from the power supply **BEFORE** cleaning and also when the appliance is not in use.
3. Always keep the appliance out of children's reach.
4. This product must not be left unattended while it is connected to the main supply.
5. Ensure that the voltage of the appliance corresponds to the voltage indicated on your power supply meter.
6. Always unplug the appliance from the power supply after use and before cleaning
7. Wait until the beaters (dough hooks) have completely stopped before turning the mixer head unit upwards.
8. Do not immerse the motor unit in water or other liquids or place it under running water.
9. Never attempt to disassemble the appliance yourself.
10. If the power lead, cord or plug is damaged, do not use the appliance.
11. If the power cord is damaged, have it replaced by the manufacturer or service agent in order to avoid a hazard.
12. Always place appliance on a flat sturdy surface when using.
13. This appliance should not be used by the physically challenged, slow response or mentally disabled people (including children) unless guidance is provided during operation

Parts Identification and Specifications

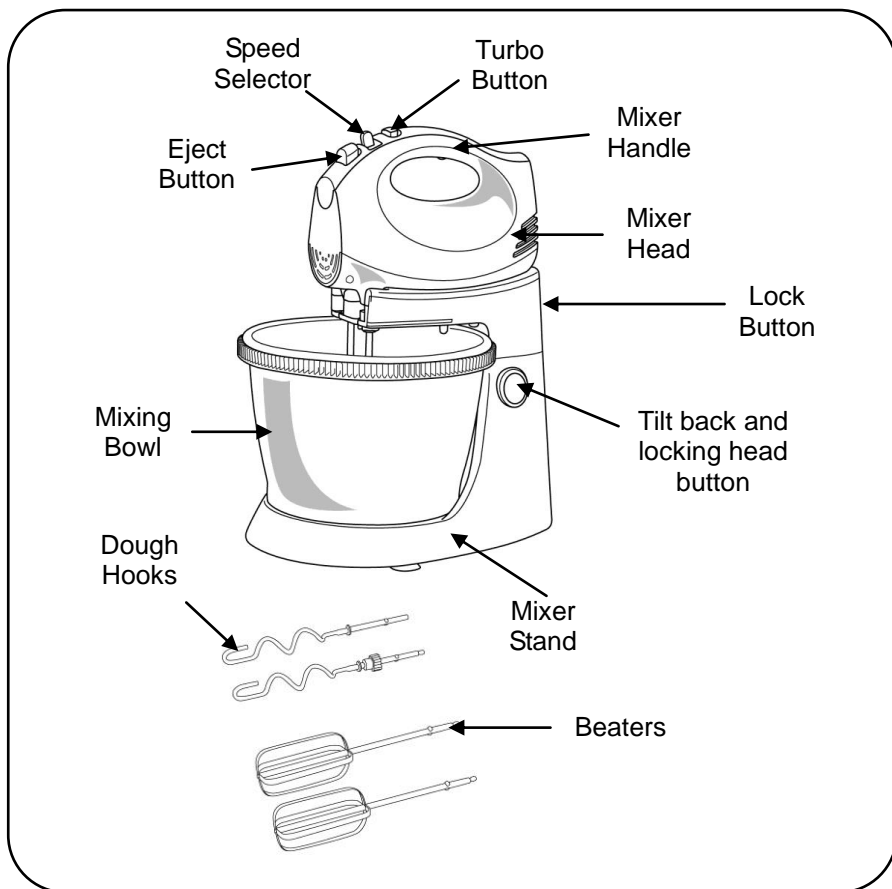

Specifications

MODEL	CSM-8007HP
RATED VOLTAGE	220-240V~
RATED WATTAGE	250W
FREQUENCY	50Hz

Operating Instructions

1. Insert the beaters (dough hooks) first at mixer head. The beaters (dough hooks) with gear must insert at the correct slot then, press and twist until the beater (dough hook) clicks into position.
2. Press the tilt button to turn the mixer head unit upwards. Place the mixing bowl onto the base.
3. Place mixer head at mixer stand and insert it into the slot at lock button until it clicks into position.
4. Then press the tilt button to lever down the mixer head unit.
5. Switch on the appliance beginning from the lowest speed “1”.
6. Increase the speed as desired until “5”. Maximum operating time must be less than 5 minutes.
7. For additional power, press the “turbo” button for maximum speed. The Max. Turbo operating time must be less than 1 minute.
8. After use, reset the speed control to position “O” and switch off.
9. To disconnect the beaters (dough hooks), press tilt button to turn mixer head upward, then press lock button to take out the mixer head. Press eject button to remove the beaters (dough hook) mixing bowl also can't take out.
10. Always unplug from the power supply when you have finished and before cleaning.

Note: This unit is fitted with circuit breaker. This Circuit breaker will stop the machine immediately if the machine is overheated. User need to cool down the machine before reusing it.

Caution: The maximum load for mixing flour is 300 grams of flour with 150 grams of water , the proportion must not be exceeded.”

MIXING GUIDE

SPEED	DESCRIPTION
1	This is a good starting speed for bulk and dry foods such as flour, butter and potatoes.
2	Best speed for liquid ingredients.
3	For mixing cakes and quick breads.
4	For creaming butter and sugar, beating uncooked candy, desserts, etc.
5	For beating eggs, cooked icings, whipping potatoes, whipping cream, etc.
TURBO	Same speed as Speed "5".

Care and Cleaning

1. Unplug the appliance from the power supply.
2. Clean the exterior of the appliance using a damp cloth.
3. Clean the Beaters or Dough Hooks under running water or in the dishwasher. Rinse and dry.
4. We recommend cleaning the accessories immediately to remove any food residues from the accessories after use. This will make cleaning easier and prevents bacterial growth.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CORnell[®]

Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com