

**CORNELL®**

# User Manual



Toaster


**CT-EDC38**

## General Safety Precautions

1. Thank you for your purchase of this appliance. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the appliance from the power socket before cleaning or when not in use.
3. If it is a detachable power cord, always connect the power cord to the appliance first **BEFORE** plugging it into the power socket. To disconnect the appliance, switch it off first before removing the power plug from the power socket.
4. Close supervision is necessary when operating the appliance near children. Ensure that the power cord does not hang over the work surface.
5. Do not use the appliance for any purposes other than its intended use.
6. Do not operate the appliance with a damaged power cord set or plug. Any repairs should always be carried out by an authorized service centre.
7. Always place the appliance on a flat sturdy surface. When moving it, always ensure not to touch the hot surfaces and avoid spilling any hot items it may contain.
8. Do not immerse the appliance or electrical parts into water or any other liquids.
9. Use of accessories or equipments not supplied by the manufacturer may result in damages or malfunction on the appliance or injuries to the user.
10. This appliance should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

11. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

## Parts Identification

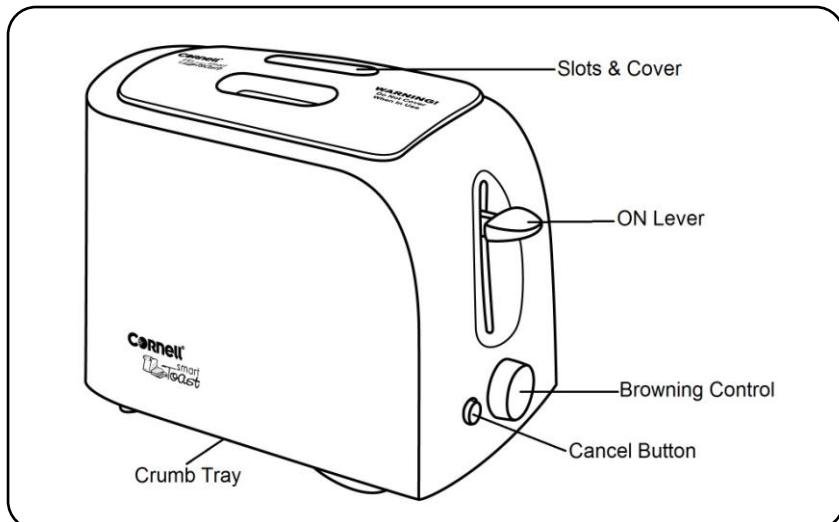

## Specifications

Model No.	CT-EDC38
Voltage / Frequency	220-240V~, 50Hz
Power	550-650W

## Operating Instructions

**Before using for the first time:** Operate the toaster at the highest degree of browning for three times without any bread.

### **Making toast**

- When you plug the toaster into the power socket, revolve the browning selector knob to the centre position. There are 7 browning degrees that can be selected by adjusting the corresponding knob from 1=lightest toast, up to 7=darkest toast.
- Insert the bread slices into the slots.
- Press the ON lever downwards to lower the slices of bread into the toaster. The toaster will start operating.
- The ON lever will return to its original position when the toasting is done.
- While the toaster is operating, it is possible to make the toast lighter or darker by turning the browning selector knob.
- The toaster switches off automatically when the toasting time comes to an end. The toasted breads will pop up from the slot.

Press the **CANCEL** button when

- The toast is too dark.
- Or a fault occurs.

### **WHAT DO YOU NEED TO KNOW ABOUT BREAD SLICES?**

- The bread type, moist content, freshness, thickness and quantity will all have an effect on the browning outcome.
- If you are going to toast two slices of bread side by side and getting similar result, they should be the same bread type, moist content and freshness.
- The toaster can be used for any breads, cakes, frozen products and pastries with no toppings.
- The thickness of each bread slice should not exceed 2.5 cm.

### **Very thin bread slices:**

- Will not be centered automatically.
- Should be toasted at the lowest degree of browning in order to avoid being burnt on one side.
- Always store sliced breads for toasting in a dry location.
- Keep the breads in a sealed wrapper to maintain freshness.
- Darker types of bread generally need to be toasted at a higher degree of browning.

## Care and Cleaning

- Pull out the power plug and wait for the toaster to cool down.
- Remove and empty the crumb tray.
- Wipe the exterior parts with a damp cloth.
- Do not use sharp objects or abrasive substances to clean the toaster.
- Do not immerse the toaster into water or put it in a dishwasher.
- For any other maintenance and servicing work not described here, ensure that they are performed only by an authorized service personnel.
- Regular cleaning, care and servicing of the toaster will ensure its performance at all times.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Marketed by:

**CORNELL SALES & SERVICE SDN BHD (604369-P)**

Lot 11B, Jalan 223, Section 51A,  
46100 Petaling Jaya,  
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770

[www.cornellappliances.com](http://www.cornellappliances.com)