 


CORnell®

User Manual

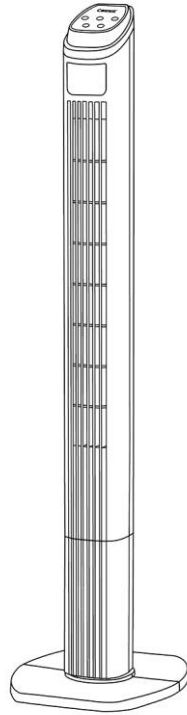

Tower Fan

CTF-E45RC

SAFETY REGULATION

- Read all the instruction carefully. Keep this user manual for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of appliance by a person responsible for their safety.
- Use only original accessories supplied.
- The current voltage which indicates on the plate must correspond to your local voltage.
- The appliance should be used only on condition that the type of power supply corresponds to the marking label. Otherwise, it will not work or even be damaged.
- Never use the appliance inside the bath, under a shower or over a wash basin full of water.
- If the appliance falls into water, pull the power plug out from the power socket immediately.
- Never use the appliance unless it is fully assembled.
- Do not overload outlets or extension cords. It can result in fire or electric shock.
- Do not use the appliance if the power supply cord or plug has been damaged.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not immerse the cord, plug or appliance in water or other types of liquid and do not pour water onto it to avoid from fire, electrical shock or personal injury.
- To protect against risk of electrical shock, do not force any foreign objects such as pins and wires into any openings.

PARTS IDENTIFICATION


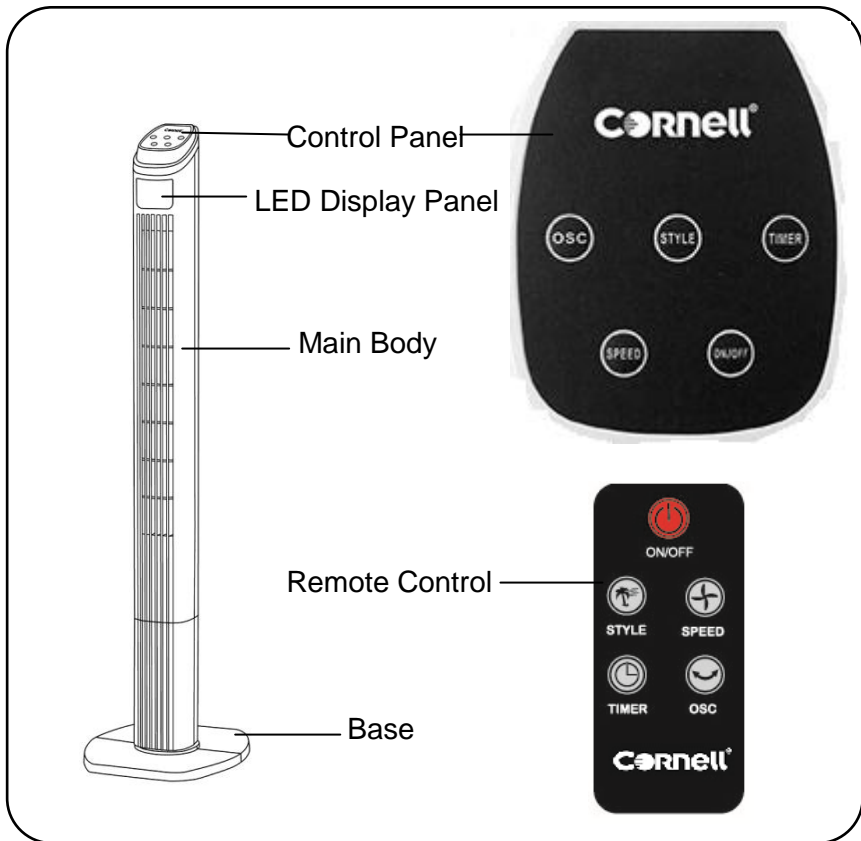 


Fig.3 LED display panel

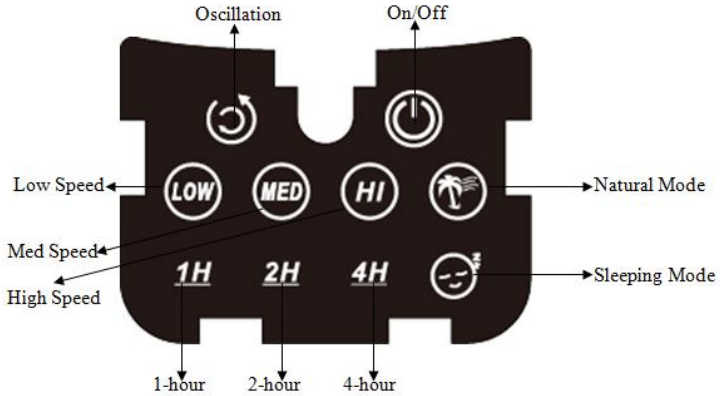 

SPECIFICATION

Model	CTF-E45RC
Voltage	220-240V~
Frequency	50-60Hz
Power	50W

 
OPERATING INSTRUCTIONS

Before Using

- Please read these instructions carefully before using and keep them for future reference.

- Check your local main voltage whether it is the same as stated on the rating label.
- Before using for the first time, remove any protective films or stickers from the table fan.
- Ensure the power switch is at the “0” position.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn OFF any control, then remove plug from wall outlet.

How to Assembly Table Fan

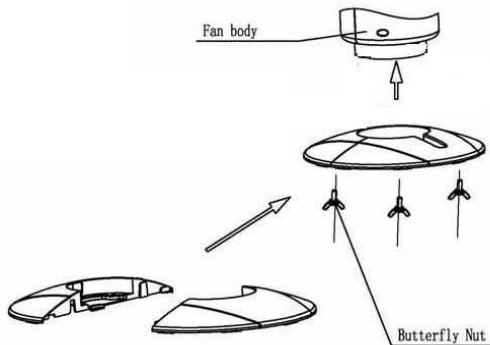

- Assembly the front base and rear base.
- Insert the assembly base to main body. Use the base screws (provided) to secure base to the main body.
- Do not use this appliance before finish assembly.
- Ensure the stand body is completely interlocked with the base unit.

How to Use Table Fan

CONTROL PANEL:

“ON, OFF” button

Press the **ON** button once, the fan will start at low speed, normal style and normal mode.

Press the **OFF** button again will turn the fan off.

“SPEED” button:

To adjust fan speed, press once for medium speed, and twice for high speed.

Press the third time to return to low fan speed.

“STYLE” button:

To select normal mode, natural mode or sleep mode:

NORMAL mode: unit operates in selected fan speed, High, Medium or Low.

NATURAL mode: unit operates according to computerized intervals of changing speeds.

SLEEP mode: unit operates according to computerized intervals of changing speeds

“OSC” button

To activate the Oscillation feature, press the **OSC button** once.

Press the **OSC button** again to turn the Oscillation feature off.

“TIMER” button

When the fan is in use, you can set the time to close the appliance. Press the **TIMER** button, the default time is 1h. You can press the timer buttons continually to set the timer off function between 1, and 7 hours.

REMOTE CONTROL:



ON/OFF button

Press once to turn on the fan. Unit will start at Low fan speed.

Press will turn the fan off



 
STYLE button

To select normal mode, natural mode or sleep mode:

NORMAL: unit operates in selected fan speed, High, Medium or Low.

NATURAL mode: unit operates according to computerized intervals of changing speeds.

SLEEP mode: unit operates according to computerized intervals of changing speeds.



SPEED button

Press once to turn on the fan.

Unit will start at Low fan speed.

To adjust fan speed, press once for medium speed, and twice for high speed.

Press the third time to return to low fan speed.



TIMER button

When the fan is in use, you can set the time to close the appliance. Press the **TIMER** button, The default time is 1h. You can press the timer buttons continually to set the timer off function between 1, and 7 hours.



button

To activate the Oscillation feature, press the **OSC button** once.

Press the **OSC button** again to turn the Oscillation feature off.

CARE AND CLEANING

- Always unplug the product from the wall socket and shut down completely prior to cleaning.
- Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
- Please be cautious when cleaning the product near to the heater housing area.
- Use only damp cloth to wipe the exterior surfaces of the unit. Do not immerse the main body in water.
- Do not allow the electrical components to be exposed to water.
- For proper storage, always place the unit in a low humidity environment.



Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com