 


**CORnell®**

# User Manual

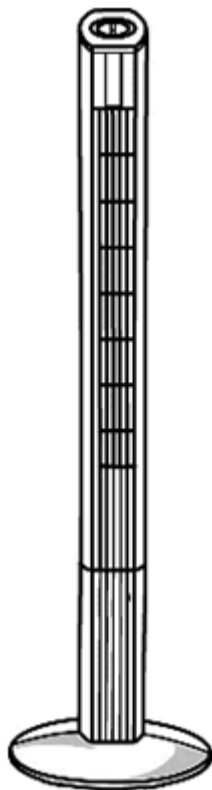

 
 
**Tower Fan**

**CTF-S45M**

## Safety Precautions

1. Thank you for your purchase of this appliance. Read all instructions carefully. Keep this User Manual for future reference.
2. Always switch off and unplug the appliance from the electrical outlet **BEFORE** cleaning and also when not in use.
3. Never immerse the appliance, power cord or plug into water or other liquids. Please refer to the section on "Care and Cleaning".
4. If it is a detachable power cord, always connect the power cord to the appliance first **BEFORE** plugging it into the electrical outlet. To disconnect the appliance, switch off the power on the electrical outlet before removing the power plug.
5. Close supervision is necessary when operating the appliance near children. Ensure that the power cord does not hang over the work surface.
6. Do not operate the appliance with a damaged power cord set or plug. Any repairs should always be carried out by an authorized service centre.
7. Do not use the appliance for any purposes other than its intended use. This appliance is intended for household use only.
8. Do not use the appliance in the outdoors or in a damp area.
9. Do not place the appliance on or near a hot gas or electric burner, or near easily flammable materials.
10. This appliance should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

## Parts Identification

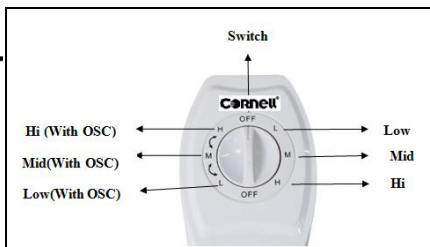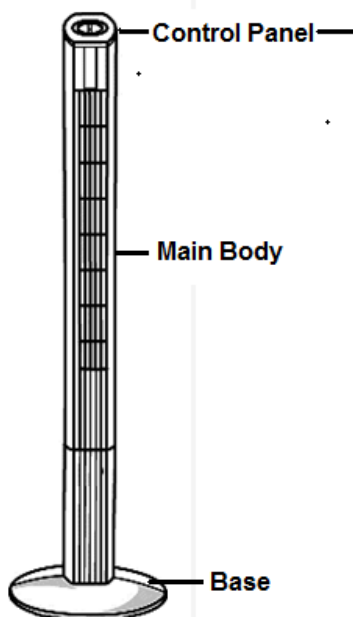


## Specifications

Model No.	CTF-S45M
Rated Voltage	220-240V~
Rated Power	50W
Frequency	50/60Hz

# Operating Instructions

## Assembling Method

 1. Unpack the appliance from the gift box.
2. Lay the main body horizontally on the ground.
3. Assemble the front base and rear base.
4. Insert the assembled base to the main body. Use the base screws (provided) to secure base to the main body.
5. Lift the Tower Fan upright.
6. Do not use this appliance before finish assembling.

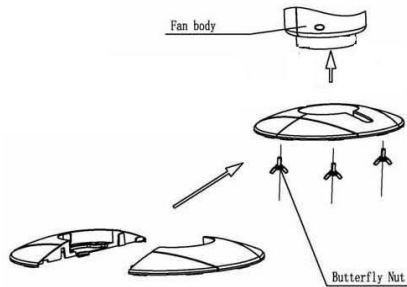

## Operating Procedure

- The appliance is to be operated by adjusting the speed control knob at the control panel.
- Turn on the appliance by turning the speed control knob to either speed indicator, with or without oscillation function.
- To activate the appliance without oscillation, turn the speed control knob clockwise. The fan speed can be manually adjusted in sequence from Low – Medium – High.

- To activate the appliance with oscillation, turn the speed control knob anti-clockwise. The fan speed can also be manually adjusted in sequence from Low – Medium – High.
- The appliance can be stopped any time during any of the above operation by turning the speed control knob to OFF.

## Care and Cleaning

1. Always disconnect the appliance from the electrical outlet before cleaning.
2. Never immerse the appliance, power cord and plug into water or allow moisture to come in contact with the appliance.
3. Wipe the exterior parts of the appliance with a mild and damp cloth or cleaner. Never use a corrosive cleaner.
4. To clean between the grilles, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove the dust.
5. For proper storage, always place the appliance in a low humidity environment.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Marketed by:

**CORNELL SALES & SERVICE SDN BHD** (604369-P)

Lot 11B, Jalan 223, Section 51A,  
46100 Petaling Jaya,  
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770  
[www.cornellappliances.com](http://www.cornellappliances.com)