

CORNELL®

User Manual



**Hair
Dryer**


CHD-E1200W

Safety Precautions

- Before connecting the appliance check that the voltage indicated on the appliance corresponds to the mains voltage in your home.
- **Keep away from water!** Do not use this appliance near or over water contained in baths, washbasins, sinks, etc. If, for some reason, the product has fallen into water: unplug from the mains immediately.
- If the hair dryer falls into water, pull the power plug out from the power socket immediately. **Never put your hands into the water.**
- Ensure a qualified electrician inspects the appliance before using again.
- Do not direct aerosols or water sprays into hair dryer.
- The Air Outlet Grill will become hot during use, therefore – do not obstruct the air outlets and do not allow the flex to be in contact with the Air Outlet during use.
- Inspect the flex for possible damage from time to time.

- When drying hair in rollers, do not allow clips, hairpins, etc. to protrude more than 10mm (finger width) to prevent contact with the live parts inside the hair dryer.
- Do not allow children to use a hair dryer without supervision.
- Please read these operating instructions carefully and explain all precautions to children.
- Always unplug after use and before cleaning.
- Keep hair away from the hair dryer's air inlet opening.
- A qualified electrician should only perform repairs to the hair dryer. Improper repairs may put the user at serious risks.
- **CAUTION:** DO not use the hair dryer near bathrooms, lavatory or any wash basins.
- Only a qualified technician be allowed to do maintenance and component replacements.
- After use, always unplug the hair dryer for safety reasons.

Parts Identification

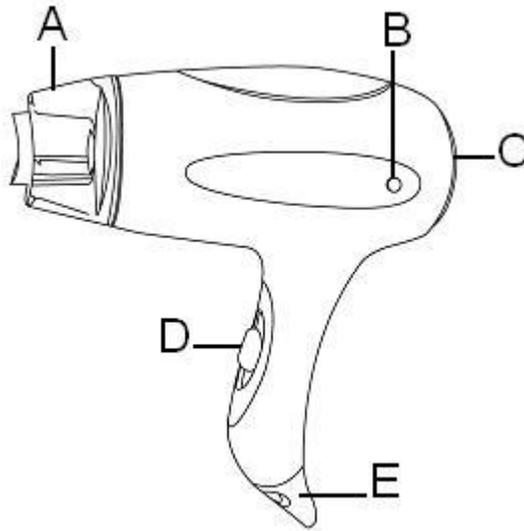

A - Concentrator

B - Indicator Light

C - Air Inlet Cover

D - Switch

E - Wire Protection

Specifications

Model	CHD-E1200W
Voltage	220-240V~
Frequency	50Hz
Power	1200W

How to use

Ensure that the hair dryer does not get wet and do not use it with wet hands. Always switch the hair dryer off before putting it down.

Switch

0 = Appliance Off

1 = Minimum speed

2 = Maximum speed

Care and Cleaning

- Always disconnect your hair dryer before cleaning.
- Do not immerse the appliance into water or any other liquids.
- Always inspect the hair dryer for dust or hair and remove them periodically.
- Clean the appliance with a slightly damp cloth and dry it up with a dry cloth.



Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

(Formerly known as Amtek Marketing Services Sdn Bhd)

Lot 11A, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

www.cornell.com.my