 
 


CORNELL®

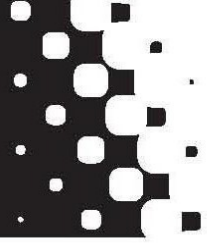

User Manual

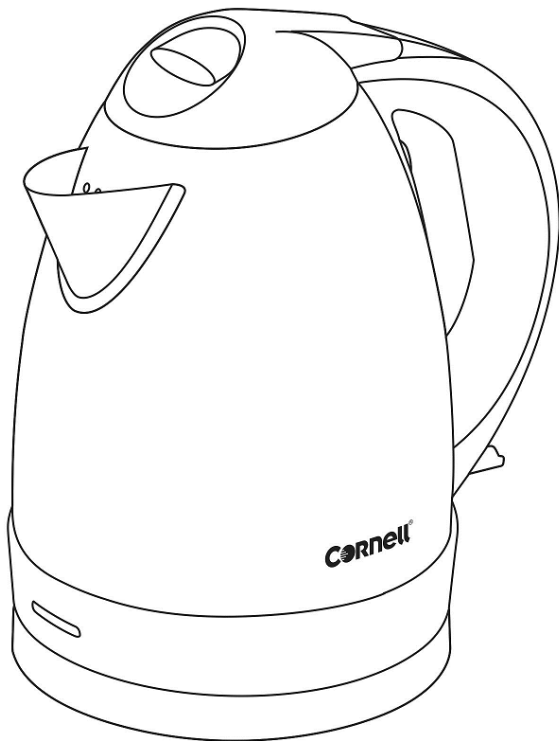

 
Jug Kettle

CJK-E173SS

Safety Precautions

1. Thank you for your purchase of this appliance. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the appliance from the power socket before cleaning or when not in use.
3. Always attach the power cord to the appliance first **BEFORE** plugging it into the power socket. To disconnect the appliance, switch it off first before removing the power plug from the power socket.
4. Close supervision is necessary when operating the appliance near children. Ensure that the power cord does not hang over the work surface.
5. Do not use the appliance for other than its intended use.
6. Do not operate the appliance with a damaged power cord set or plug. Any repairs should always be undertaken by an authorized service centre.
7. Always place the appliance on a flat sturdy surface. When moving it, always ensure not to touch the hot surfaces and avoid spilling any hot liquids it may contain.
8. Do not immerse the appliance or its electrical parts into water or any other liquids.
9. Use of accessories or equipments not supplied by the manufacturer may result in damages or malfunction on the appliance or injuries to the user.
10. This appliance should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

Parts Identification

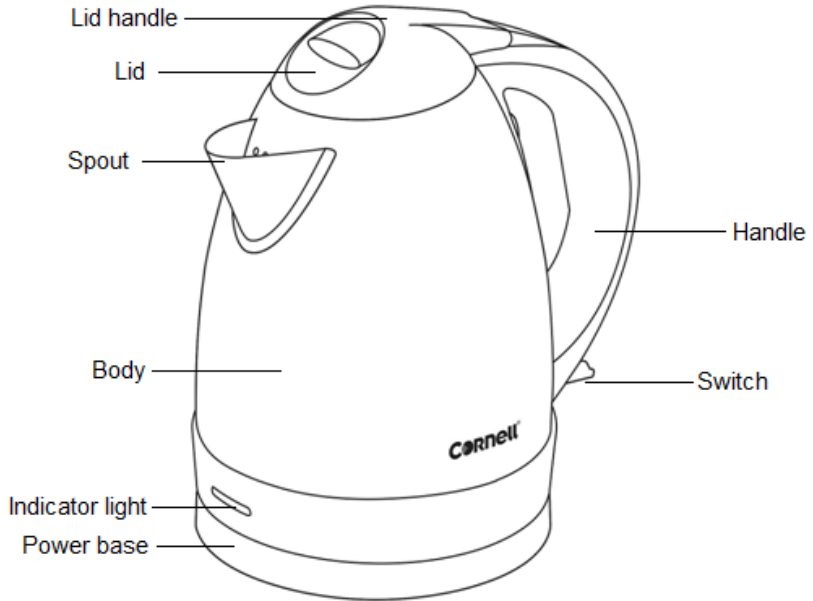

Specifications

Model	CJK-E173SS
Rated Voltage	220-240V~
Rated Power	1680-2000W
Capacity	1.7L

Operating Instructions

Before Using

- Please read these instructions carefully before using this appliance and keep them for future reference.
- Ensure that the local mains voltage is same as stated on the appliance.
- Never use the appliance near to the sink, bathtub, shower or any other places that may contain water.
- Remove any protective films or stickers from the appliance before using it for the first time.
- Boil and discard the water at least twice without adding any chemicals or other additives.
- Ensure that the power switch is at the OFF position before connecting the appliance to the power socket.

Operating Instruction

- Fill the jug kettle with water as required. You may refer to the water level indicator as reference. Do not exceed the “MAX” mark or below the “MIN” mark.
- Place the jug kettle onto the power base and connect to the power socket.
- Lift the switch up to start operating. The boiling indicator light will be illuminated.
- You may interrupt the boiling process at any time by pressing down the switch to switch off the power.
- The jug kettle switches off automatically when the water is boiled. The boiling indicator light will be turned off.
- Disconnect the jug kettle from the power socket.
- Do not open the lid whilst pouring as hot steam or hot water may leak out and cause injury to the user.

- Note: This appliance comes with a safety switch which will automatically switch the power off when the appliance is inadvertently switched on while the jug kettle is empty or dry boiling. In this case, let the appliance cool down completely before filling water.

Care and Cleaning

Before commencing to clean the jug kettle, ensure that the mains power is switched OFF and the power cord is removed from the appliance. Wait until the jug kettle is at room temperature before commencing to clean it.

- Never immerse the jug kettle into water, or allow moisture to come into contact with it.
- When it is necessary, the exterior surfaces may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean the jug kettle.
- To clean the interior of the jug kettle, use a food-grade descaling compound manufactured for this purpose, such as citric acid.



Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)

Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com