


**CORnell®**

# User Manual

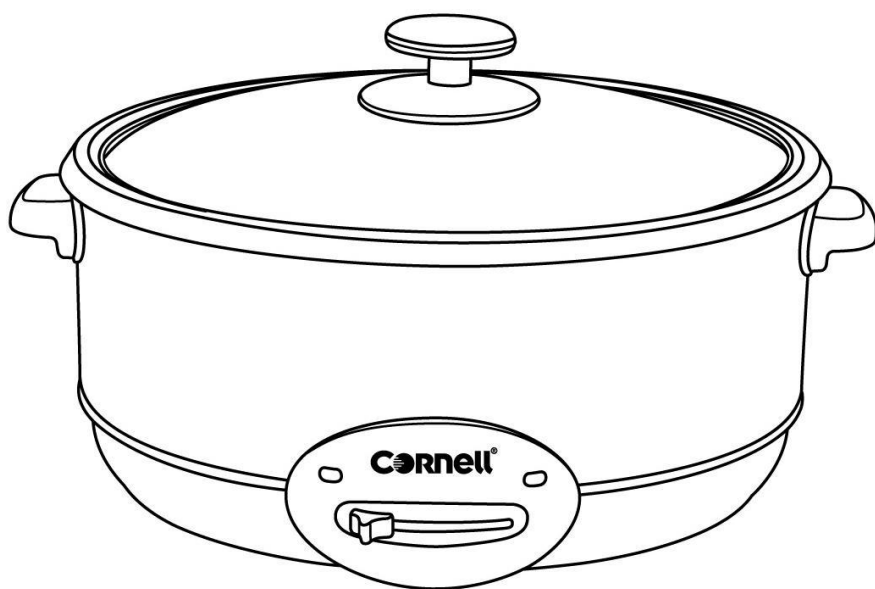

**Multi  
Cooker**

**CMC-S1600A**


## General Safety Precautions

1. Thank you for your purchase of this multi cooker. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the multi cooker from the power socket before cleaning or when not in use.
3. If it is a detachable power cord, always attach the power cord to the multi cooker **BEFORE** you plug it into the power socket. To disconnect the multi cooker, switch it off first before removing the power plug from the power socket.
4. Close supervision is necessary when operating the multi cooker near children. Ensure that the power cord does not hang over the work surface.
5. Do not use the multi cooker for other than its intended use.
6. Do not operate the multi cooker with a damaged power cord set or plug. Any repairs should always be undertaken by an authorized service centre.
7. Always place the multi cooker on a flat sturdy surface. When moving it, always ensure not to touch hot surfaces and avoid spilling any hot liquids it may contain.
8. Do not immerse the multi cooker or its electrical parts into water or any other liquids.
9. Use of accessories or equipment not supplied by the manufacturer may result in damages or malfunction on the multi cooker or injuries to the user.
10. This multi cooker should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

## Specifications

|                     |                 |
|---------------------|-----------------|
| Model No.           | CMC-S1600A      |
| Voltage / Frequency | 220-240V~, 50Hz |
| Power               | 1500-1780W      |
| Capacity            | 3.8L            |

## Parts Identification

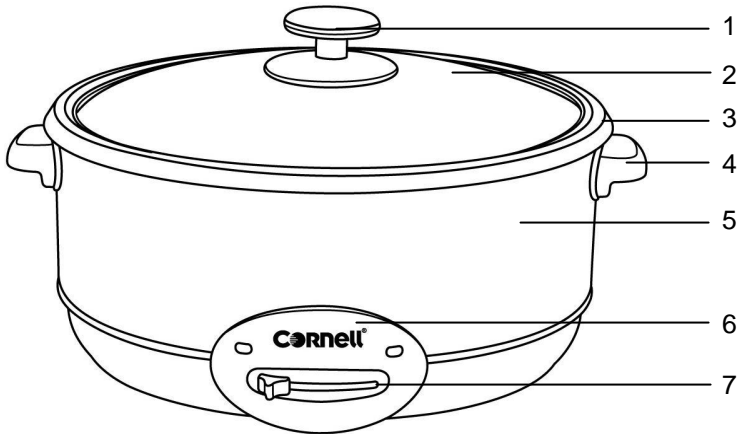

1. Lid Handle
2. Glass Lid
3. Inner Pot

4. Outer Body
5. Control Panel
6. Temperature Setting Control

## Operating Instructions

### Before Using

- Please read these instructions carefully before using this multi cooker and keep them for future reference.
- Ensure that the local mains voltage is same as stated on the multi cooker.
- Never use the multi cooker near to the sink, bathtub, shower or any other places that may contain water.
- Remove any protective films or stickers from the multi cooker before using it for the first time.
- Ensure that the power switch is in the “OFF” position.

### Operating Instructions

- Please dry the inner pot well before use. Put the inner pot inside the multi cooker properly, connecting it well with the heating plate. Otherwise, it may cause damage.
- The multi cooker has many functions. You may steam, stew or slow cook, and fry with this versatile appliance.
- Always start any cooking functions at the lowest setting and gradually increase the temperature to suit the food being cooked. The temperature setting is variable. Choose the best setting for desired cooking results.
- Always put solid food into the inner pot first before adding water or stock to avoid splashes. Use the lid to speed up the cooking process and to retain the flavor of the dish.
- Always use a wooden spatula for stir frying or stirring so as not to damage the inner pot.

## Care and Cleaning

- Always unplug the multi cooker from the power socket prior to cleaning.
- Do not use the abrasive sponge, scouring pads or stiff brush to clean the multi cooker. The inner pot may be cleaned with mild soapy water using a sponge or soft cloth.
- Occasionally wipe the exterior surfaces with a damp cloth.
- Occasionally check that there are no objects in the interior parts. Remove them if found.
- In an event of the multi cooker malfunctioning, it should be taken to the nearest authorized service centre.



Marketed by:

**CORNELL SALES & SERVICE SDN BHD** (604369-P)

Lot 11B, Jalan 223, Section 51A,  
46100 Petaling Jaya,  
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770  
[www.cornellappliances.com](http://www.cornellappliances.com)