


# CORNELL®

## User Manual

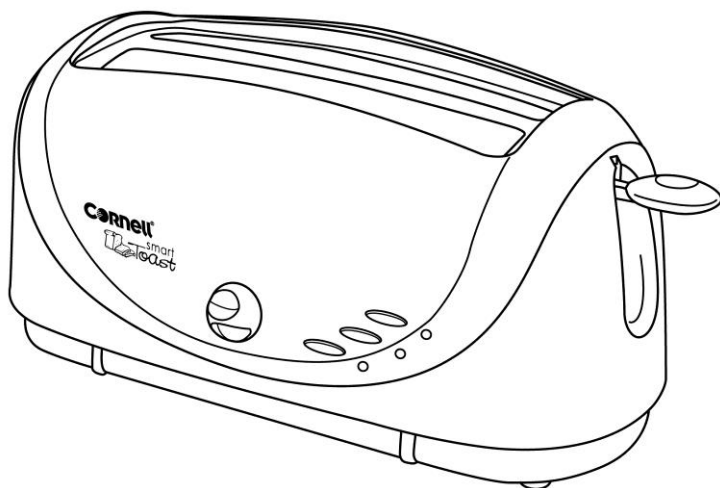


**Pop-Up  
Toaster**

**CT-E48C**

## General Safety Precautions

1. Thank you for your purchase of this appliance. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the appliance from the power socket before cleaning or when not in use.
3. If it is a detachable power cord, always attach the power cord to the appliance first **BEFORE** plugging it into the power socket. To disconnect the appliance, switch it off first before removing the power plug from the power socket.
4. This product must not be left unattended while it is connected to the mains supply.
5. Close supervision is necessary when operating the appliance near children. Ensure that the power cord does not hang over the work surface.
6. Do not operate the appliance with a damaged power cord set or plug. Any repairs should always be undertaken by an authorized service centre.
7. Always place the appliance on a flat sturdy surface. When moving it, always ensure not to touch the hot surfaces and avoid spilling any hot items it may contain.
8. Do not immerse the appliance or electrical parts into water or any other liquids.
9. Use of accessories or equipments not supplied by the manufacturer may result in damages or malfunction on the appliance or injuries to the user.
10. This appliance should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

## Parts Identification

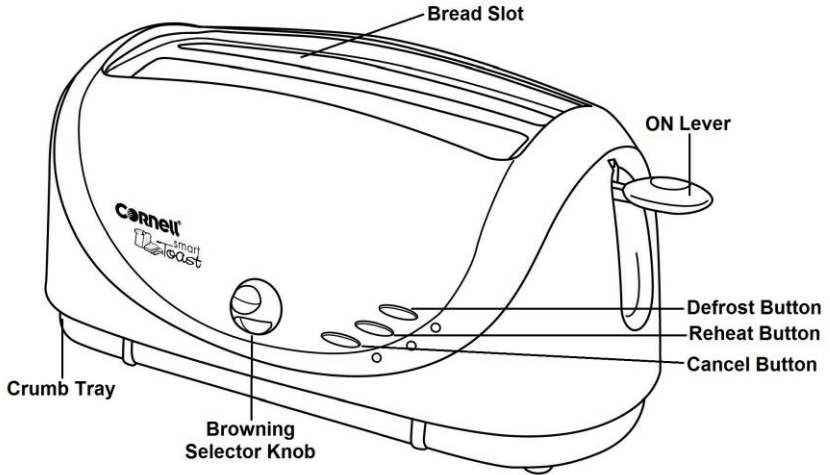

## Specifications

Model No.	CT-E48C
Voltage / Frequency	220-240V~, 50Hz
Power	1400W

## Operating Instructions

### Before using for the first time:

As there is manufacturing residue of oil remain in the toaster or heating element, it usually will emit a certain odor for the first use. It is normal and will not occur after several times of use. For the first use, it is suggested to operate the toaster at the highest degree of browning for three times without any bread. Then, let the toaster cool before toasting the first slice.

## **Making Toast**

- When you plug the toaster into the power socket, turn the browning selector knob to the center position. There are 7 browning degrees that can be selected by adjusting the corresponding knob from 1=lightest toast, up to 7=darkest toast.
- Insert the slices of bread into the slots.
- Press the ON lever downwards to lower the slices of bread into the toaster.
- The ON lever will return to its original position when the toasting is done.
- While the toaster is operating, it is possible to make the toast lighter or darker by turning the browning selector knob.
- The toaster switches off automatically when the toasting time comes to an end. The toasted breads will pop up from the slots.

## **Function:**

### **Defrost Button**

- If the bread has been taken out from refrigerator, press “**Defrost**” button and the lamp beside it will be illuminated and the bread will start toasting.

### **Reheat Button**

- If you want to reheat the cold toasted bread, press the “**Reheat**” button and the lamp beside it will be illuminated. In this mode, toasting time is fixed. When the time is over the ON lever will automatically spring up and it will end the reheating process.

### **Cancel Button**

- During the toasting process, observe the browning of the toasts color. If it is satisfying, then press the “**Cancel**” button to cancel the operation at any time.

### **WHAT DO YOU NEED TO KNOW ABOUT BREAD SLICES?**

- The bread type, moist content, freshness, thickness and quantity will all have an effect on the browning outcome.
- To toast two slices of bread side by side and get similar result, they should be the same bread type, moist content and freshness.
- The toaster can be used for any bread with no toppings.
- The thickness of each bread slice should not exceed 2.5 cm.
- Darker types of bread generally need to be toasted at a higher degree of browning.

#### **Very thin bread slices:**

- Will not be centered automatically.
- Should be toasted at the lowest degree of browning in order to avoid being burnt on one side.
- Always store sliced breads for toasting in a dry location.
- Keep the breads in a sealed wrapper to maintain freshness.

#### **Caution:**

- If smoke appears from the toaster, press “**Cancel**” button to stop toasting immediately.
- Remove all protective wrapping prior using the toaster.
- Avoid toasting the food with extremely runny ingredients such as butter.
- Never attempt to remove breads jammed in the slots without unplugging the toaster from the electrical outlet first. Make sure not to damage the internal mechanism or heating elements when removing the breads.

## Care and Cleaning

- Pull out the power plug and wait for the toaster to cool.
- Remove and empty the crumb tray.
- Wipe the exterior parts with a damp cloth.
- Do not use sharp objects or abrasive substances to clean the toaster.
- Do not immerse the toaster into water or put it in a dishwasher.
- For any other maintenance and servicing work not described here, ensure that they are performed only by an authorized service personnel.
- Regular cleaning, care and servicing of the toaster will ensure its performance at all times.

### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Marketed by:

**CORNELL SALES & SERVICE SDN BHD** (604369-P)

Lot 11B, Jalan 223, Section 51A,  
46100 Petaling Jaya,  
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770  
[www.cornellappliances.com](http://www.cornellappliances.com)