

CORnell®

User Manual



Jar Rice Cooker

CRC-JE120
CRC-JE180

CORnell®

Marketed by:

CORNELL SALES & SERVICE SDN BHD (604369-P)


Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.

InfoLine: 1-800-881-770
www.cornellappliances.com

CONTENTS

	Page
1. Parts Identification	1
2. Precautions	2
3. How To Cook Rice	3
4. How To Keep Cooked Rice Warm And Tasty	5
5. How To Load And Unload Dew Collector	5
6. How To Use Steamer	6
7. How To Clean	6
8. Specification	7


PARTS IDENTIFICATION

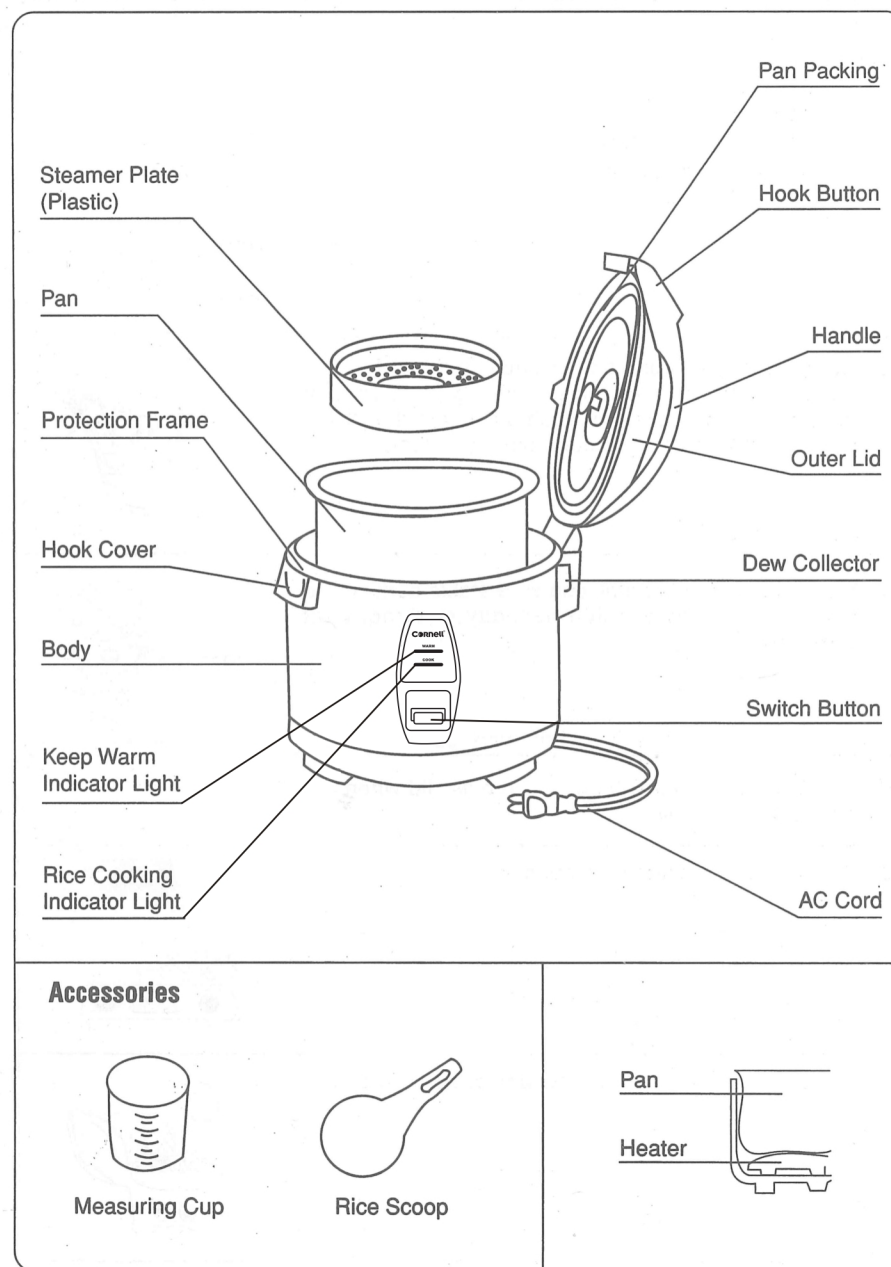

PRECAUTIONS

1. Rice cooker will not be functional if the pan is not in the cooker.

2. Always keep pan bottom and heater clean and dry. Any foreign material between both items will cause cooker to malfunction.

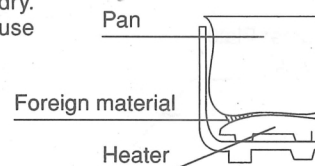

3. Do not attempt to press the switch by force if switch button cannot be pressed to cooking position. The switch normally remain in such position if the pan is not in the cooker or just after cooking is completed.




4. Rice cooker should be placed on a stable surface. Do not expose to water, high humidity or direct heat substance.



5. Do not cover with anything on the outer lid when the rice cooker is in use.

6. Do not use pan directly on open fire.

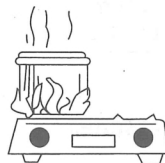


7. Do not immerse cooker in water and avoid putting near fire.



HOW TO COOK RICE

1. Measure rice with the measuring cup.


- Wash rice in another bowl until water is relatively clear.

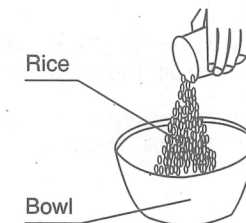

2. Place washed rice in the pan, then add water.


e.g. To cook 10 cups of rice, add water to LEVEL INDICATOR 10.

- Do not cook more than MAXIMUM LEVEL.

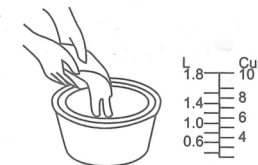

3. Place pan in the cooker. Ensure that the pan is directly in contact with the heating plate by turning it slightly from right to left until it sits properly.

- Wipe dry the outside of the pan before use. A wet pan may cause cracking noise while cooking, and may damage the unit.

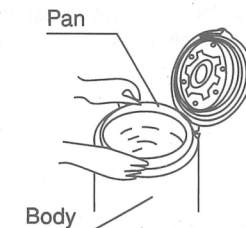


4. Close outer lid until it clicks.

- If outer lid is not closed securely, cooking will be affected.



5. Attach AC cord to cooker, then connect to power supply and press the switch button. The "Cook" light will illuminate to indicate the start of cooking process.

- When AC cord is attached, the "Keep Warm" light will be on. This does not mean that rice is cooking.
- Please press the switch button when the rice is ready to cook. Then the "Cooking Indicator Light" will turn on.

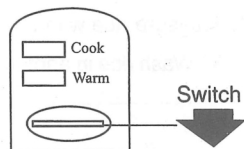


6. When rice is done, switch button will pop up. "Keep Warm" indicator will light up to indicate that keep warm function has started.

- After switch button pops up, leave cover for at least 15 minutes to steam rice.



7. Scoop and mix rice well.

- "Keep Warm" function will continue until AC cord is unplugged.

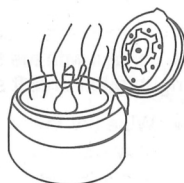

HOW TO KEEP COOKED RICE WARM AND TASTY

Washing rice

Bran may give an unpleasant odour to cooked rice. Wash rice thoroughly and quickly to effectively remove the bran.

Keep warm time

Keeping cooked rice warm or using "Keep Warm" function for more than 5 hours may cause discolouration or generate objectionable odour. The sooner cooked rice is served, the better it will taste.

Minimum quantity of rice to keep warm

When using the keep warm cycle, be sure you have at least 4 bowlfuls or 6 bowlfuls of cooked rice in the pan.


Inner lid

Be careful not to deform it, avoid rough handling. Deforming of the inner lid will adversely affect the cooking and keep warm performance of the cooker.

- To prevent dry, discoloured effect, and objectionable odour of the cooked rice, keep the outer lid perfectly closed after serving rice.
- Do not leave the rice scoop or others in the pan during the keep warm cycle.
- Do not use the keep warm feature to reheat leftover cold rice.

HOW TO LOAD AND UNLOAD DEW COLLECTOR

1. To remove – Hold the sides and pull.
2. To attach – Align and push in securely.

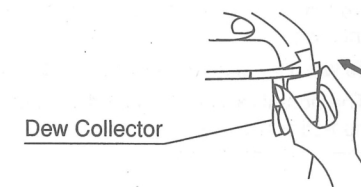

HOW TO USE STEAMER

1. STEAMER PLACING

- Put steamer at the top of rice cooker's pan.
- Put the prepared food to be steamed on steamer.

2. ADD WATER

- Water level should not be higher than the bottom of steamer.

3. STEAMING TIME

- The time of steaming will vary according to the steam temperature, water and the voltage of power source.
- You can extend steaming time by adding more water.

4. STEAMING ABILITIES

- Steam bread or equivalent.
- Steam vegetables, meat, such as chicken and fish.

HOW TO CLEAN

After cooking is completed, unplug the AC cord. When the body is cooled, clean the body and parts of the cooker as follows.

- Use a clean cloth to wipe the body of cooker.
- Automatic rice cooker which has attached aluminum inner lid can only be wiped with wet and clean cloth for cleaning, keep it dry before use.
- Wipe the outside of the body and outer lid with a clean damp cloth.
- Do not clean any portion of this cooker with abrasive or harsh cleaners.
- Do not immerse any part of the cooker in water or any liquid, other than the pan, steamer plate, inner lid and dew collector.
- Grains of rice or other foreign matters may stick to the heating plate. These must be removed to prevent improper cooking. To remove the cooked rice on the heating plate you may use a soft steel wool. Then, smooth out and polish the spot for good contact between the heating plate and the bottom of the pan.
- Improper cleaning of the rice cooker may cause unpleasant odours.
- Any residue of vinegar or salt may cause the pan coating to corrode.

Non-stick coated pan

- When serving rice, be sure to use a plastic or wooden rice scoop.
- Do not use a metal scoop, spoon, spatula, nor place spoons, fork, rice bowls, etc in the pan.
- To wash the pan, do not use abrasives or harsh cleaners. Use a sponge or soft cloth.
- The non-stick coating may discolour after repeated uses, but it will not affect the non-stick property.

IMPORTANT :

If the AC cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid any hazard. This rice cooker is fitted with thermal fuse for safety reason. If rice cooker is switch on without cooking, the thermal fuse will cut off after heated for certain time. The rice cooker can only resume function after it cool off.

Close supervision is necessary when the appliance is in use. Keep the appliance away from children.

SPECIFICATION

RATED VOLTAGE / FREQUENCY	220-240V , 50Hz	220-240V , 50Hz
RATED WATTAGE	500W	700W
CAPACITY	1.2L	1.8L